

Iron Sleek Post Kit




Post kit comes with:

- 2 Iron Sleek Brackets
 - 4 Iron Sleek Outriggers (bracket and toe)
 - 8 Iron Sleek Ground Stakes
 - Screws
- (Lumber is not included, use a 4 by 4 for the post)

How to build an Iron Sleek Post Kit

- Build outriggers according to the **outrigger instructions** provided (*2 by 4's are not included*).
- Assemble Iron Sleek brackets according to instructions provided.
- Locate and mark with spray paint where post will be mounted.
- Install an Iron Sleek bracket using the Iron Sleek install tool.
- Install the 2nd Iron Sleek bracket on paint line at 90 degree as shown in rendering
- Place post and fasten Iron Sleek bracket to post with screws provided.
- Use a simple bubble level to adjust positioning and then install outriggers and ground stakes to secure post (for taller posts consider using longer 2 by 4's for outriggers)

For post taller than 10 feet or any post application that would require to be more secure, consider using an outrigger tall versus an outrigger short.

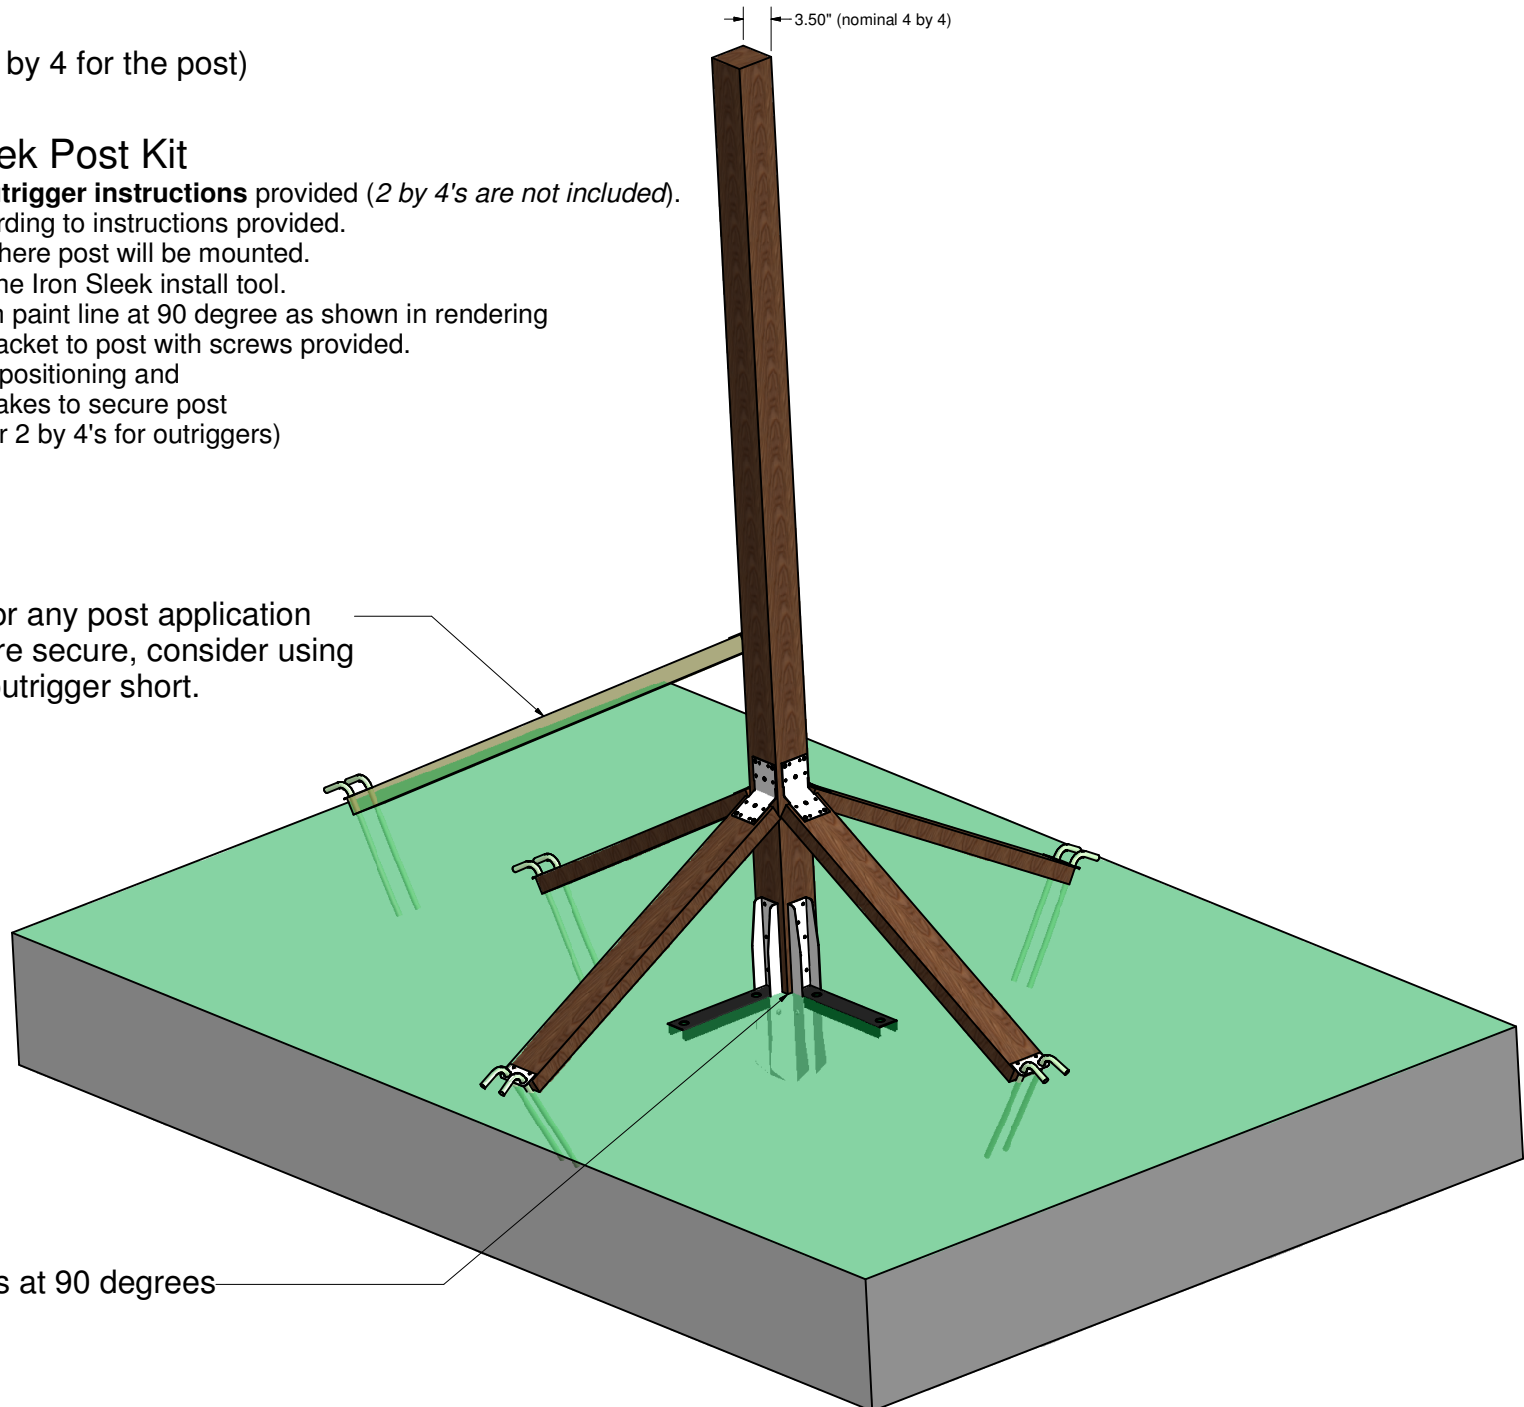

Install Iron Sleek Brackets at 90 degrees